



Description – Laser 25W LED IP67 Inground Uplight



Installation Instructions

Luminaire Code(s) – **ALWOLED**

General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

Important Safety

1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.

Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.

Exclusions to Warranty

Please Note - The limited warranty shall be null and void in the following circumstances:-

 

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature 0 - 25°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

Installation

- **Please Note – This product can only be installed using the supplied installation tub.**
 - Separate the luminaire from the installation sleeve by releasing the two fixing screws on the bezel.
 - Place the installation sleeve into the intended area. Do not install into an areas subject to flooding and standing water.
 - Fix the installation sleeve into position if required or concrete the installation sleeve into the desired location.
 - If the bottom flange is not required this can be removed by releasing the 8 screws.
 - When installing the installation sleeve into the ground, there must be adequate drainage, a minimum distance of 250mm of gravel under the sleeve is required. Should the area have a high water table, more drainage maybe required.
 - The incoming cable to the luminaire is to be terminated in a suitable junction box enclosure.
 - Terminate the supply cable to the supplied HO5RN-F cable, checking that all seals / glands are fitted correctly and have adequate compression. Ensure correct polarity is observed.
 - If replacing the supply cable you MUST use rubber insulated HO5RN-F cable to provide sufficient compression to maintain the IP67 ingress protection.
 - Sufficient cable is to be left during installation to allow the luminaire to be removed from the installation tub for any future maintenance that may be required.
 - It is the installer's responsibility to provide adequate electrical connections to maintain the correct IP rating for the installed environment. This is in accordance to BS EN 7671.
 - Connect the incoming mains cable to the luminaire.
- | | | | |
|------------------------------|---------|-----|----------------|
| • Connect as follows: | LIVE | (L) | BROWN OR RED |
| | NEUTRAL | (N) | BLUE OR BLACK |
| | EARTH | | GREEN / YELLOW |
- Ensure that there are no exposed conductors and when installing into the installation tub ensure that the cable does not become trapped.
 - Place the fittings back into the Installation tub and replace the fixing screws.
 - Restore power supply, switch on and test for satisfactory operation.

Important Information

- Do not install in chlorinated areas i.e. Swimming Pools.
- Do not clean using abrasive cleaners or polishes.
- Maximum load 3000Kg.

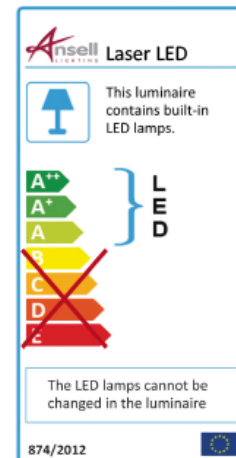

Maintenance:

1. This luminaire contains no serviceable parts.
2. If replacing the LED Driver, please ensure the driver is the correct size for the application and the secondary output is 700mA constant current with a minimum power rating of 28W per LED.



Disposal of Electronic Equipment WEEE Directive 2002/96/EC

This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.



Blue / Black



Brown / Red