



Installation Instructions

Luminaire Code(s) – AZILED__ & /PIR

General Installation Instructions

These instructions should be read carefully prior to any installation and retained after completion for further reference and maintenance. Please give these instructions to the building owner/occupier after installation.

Important Safety

1. Before installation, maintenance or lamp replacement, ensure that the mains supply to the luminaire is switched off and the circuit supply fuses are removed or the circuit breaker is turned off.
2. It is recommended that only a qualified electrical contractor carries out the installation of this luminaire and that the luminaire is installed in compliance with the current edition of the IEE Wiring Regulations.
3. The person carrying out the installation is to check and verify that the total load on the circuit, including that of this luminaire does not exceed the rating of the circuit cable, fuse or circuit breaker.
4. Where a luminaire incorporates discharge control gear (inductive load), the circuit capacity and ratings require careful sizing to avoid nuisance tripping of the protective device used in the installation.
5. Where applicable, careful consideration should be taken during installation to ensure that all fixings and/or suspensions are of a suitable size for the luminaire being installed.


Ratings

1. All luminaires are manufactured & tested in compliance with the requirement contained within BS EN 60598 and are CE marked.
2. All luminaires that are of Class 1 construction and that are marked accordingly, MUST be earthed.
3. All luminaires are designed to operate at 230Volts AC -6%/+10% = 216Volts to 252Volts. Do not operate outside these voltages.
4. All luminaires are only suitable for applications within their rated Ingress Protection limits as stated.
5. **This luminaire is designed for external use only.**

Exclusions to Warranty

Please Note - The limited warranty shall be null and void in the following circumstances:-

Failure by the installer, end user or any third party to exercise caution to protect any covered product or part from outside damage, adverse temperature (normal operating ambient temperature -10 - 40°C), humidity conditions, fluctuations in the electrical system or physical abuse as well as failure related to workmanship in the installation of the products or parts.

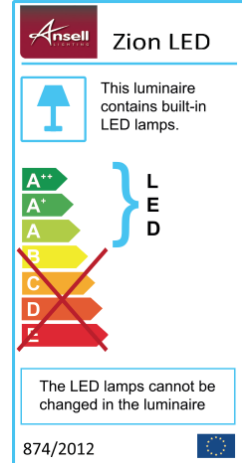

Installation

- Remove mounting bracket to facilitate installation.
 - Position and fix the bracket at a height of **1.5m-2.5m** to a suitable solid surface using suitable fixings. Care should be taken to ensure a secure fixing.
 - Secure luminaire to installed bracket and tighten Allen bolts.
 - Luminaire is supplied pre-wired with 500mm of rubber insulated cable. Supply cable to be terminated in a suitable junction box enclosure. Ensure correct polarity is observed
- Connect as follows:-
- | | | | |
|---------|-----|----------------|------------|
| LIVE | (L) | BROWN OR RED | (switched) |
| NEUTRAL | (N) | BLUE OR BLACK | |
| EARTH | | GREEN / YELLOW | |
- Supply cable should be installed with adequate drip loop to prevent ingress of moisture through the cable gland.
 - Restore mains supply, switch on and test for satisfactory operation.

Notes:

- Care should be taken when positioning luminaires with integral photoelectric cells. For optimum operation, luminaires should be installed in a north or south facing orientation.
- Avoid installing close to high reflectance surfaces.
- Avoid locations where the photoelectric cell would have difficulty detecting the daylight.
- Avoid locations where the photoelectric cell could detect light from other lighting equipment.
- Do not install near timed light sources or in shaded areas as the PIR / light sensor could be inadvertently triggered.
- Do not cover the device.
- **Adequate clearance must be allowed between any point on the rear of the luminaire & the surface above in order to allow for adequate air circulation.**

PIR Module - Set-up

It is recommended that the installing engineer makes any adjustments during initial installation.

Please ensure that the fixture is fully isolated when making any alternations to the PIR settings.

Functions / Dial Settings

Sens- 10M Fixed
Time- 8 seconds to 12 minutes
Lux- 0 -1000 Lux

Override Facility

- Install a switch onto the incoming live supply to the AZILED__/PIR. Switch the fixture on for 30 seconds then switch off and on to manually override the fixture.
- To remove the override feature, turn the switched live off for a minimum of 10 seconds and turn back on.



Lighting Installations:

It is suggested that the following information be read when undertaking exterior floodlight installations.

E1	Intrinsically Dark Areas	National Parks, Areas of Outstanding Natural Beauty, etc
E2	Low District Brightness Areas	Rural and Small Village locations
E3	Medium District Brightness Areas	Small Town Centres and Urban Locations
E4	High District Brightness Areas	Town & City Centres with a high level of night-time activity

Where the area to be illuminated is in the vicinity of two categories, then it is suggested to adopt the more restricted option.

Obstructive light Limitations for Exterior Lighting Applications


Environmental Zone	Sky Glow ULR (Max. %)	Light into Windows Ev (Lux)		Source Identity		Building Luminance before Curfew	
		Before curfew	After curfew	Before curfew	After curfew	Ave. L (cd/m ²)	Max L (cd/m ²)
E1	0	2	1	0	0	0	0
E2	2.50	5	1	20	0.5	5	10
E3	5.00	10	2	30	1.0	10	60
E4	15.00	25	5	30	2.5	25	150

- ULR** Upward Light Output Ratio of the installation and is the maximum permitted %age of the luminaire flux for the installation
- Ev** Vertical Illuminance in Lux
- I** Light intensity in Candelas
- L** Luminance in Candelas per square metre

1. **Light into windows** values are suggested maximums and need to also include any existing light at the point of measurement
2. **Source Identity** applies to each source in the potentially obstructive direction, **outside** the area of illumination
3. **Building Luminance** should be limited to avoid over lighting and relate to the general brightness. This relates directly to buildings being illuminated rather than spill light from other lighting installations or fittings mounted on buildings to illuminate other areas.

This information is for guidance purposes only and may be supplemented by any local requirements imposed the local planning department in which the lighting is to be installed. It is recommended that the relevant planning department be contacted prior to the installation taking place.

It is also suggested that the following legislation is also considered prior to the installation of exterior lighting. – Section 102 of the Clean Neighbourhoods and Environment Act 2005 amends Section 79(1) of the Environmental Protection Act 1990 to extend the statutory nuisance regime to include statutory nuisance from artificial lighting: (fb) - "artificial light emitted from a premises so as to be prejudicial to health or a nuisance".

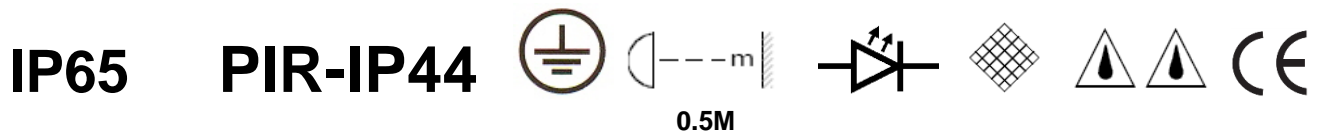

Maintenance:

1. This luminaire contains no serviceable parts.
2. The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Disposal of Electronic Equipment WEEE Directive 2002/96/EC
 This product falls within the scope of the Waste Electrical & Electronic Equipment Directive (WEEE), which means the product should not be disposed of as normal household waste. Ensure that this luminaire and lamp is disposed of in accordance with the WEEE Directive. Contact a local Council Waste Dept. Local Amenity Site, or the Environment Agency for further information. **RoHS** - All components and materials used in this product are **RoHS** 2002/95/EC compliant.